

Assembly Instructions

For Metra Floor Lamp 248413, 248413C, 248416 & 248416C

C37


Page 1 of 1

To Install Glass

Component Parts

- A Retaining Ring (2)
- B Glass (2)
- C Lamp Socket (2)
- D Socket Tool
- E Dimmer Knob
- F Dimmer Rod

1. Carefully unpack the lamp from the carton.
2. Apply a drop of the supplied thread locking compound to the internal threads at the top of the dimmer knob (E). Run dimmer rod (F) down thru grommets and thread into dimmer knob (E). Note: Application of the thread locking compound is necessary to prevent the dimmer rod from loosening. Be certain to apply the compound.
3. Remove retaining rings (A) from lamp socket (C). Save for later use. *Retaining rings are shipped installed on lamp sockets.*
4. Place glass (B) over lamp socket (C).
5. Thread the second retaining ring (A) and tighten using socket tool provided (D) until it reaches the bottom of the glass (B). *Be careful not to over tighten.*
6. Install light bulbs. "C" version bulbs are included.

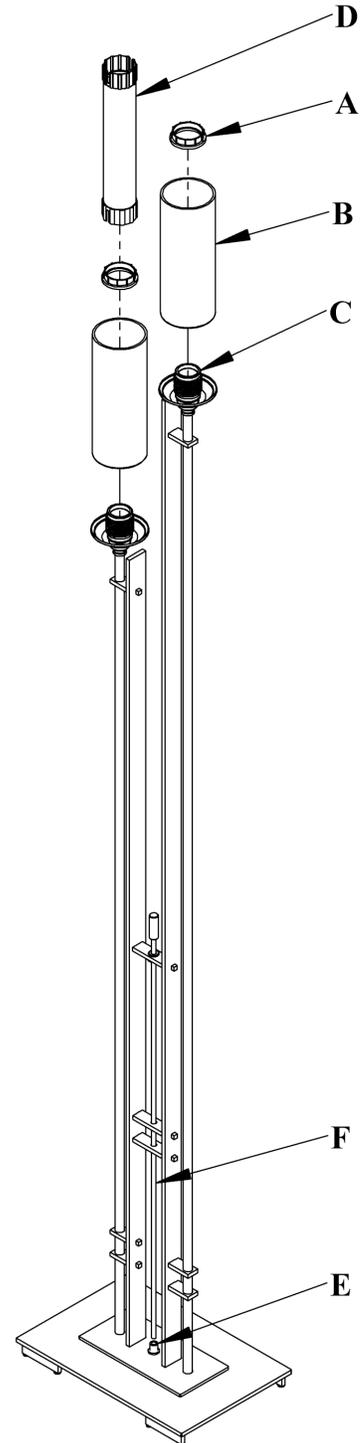

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!