

PARTS & ASSEMBLY SHEET

Fixture Name: Echelon 8981-M1L BRI / GRM


This fixture assembled PO: _____ Date: _____

Notice: Please review the parts listing and check for all parts before assembling the fixture. If any parts are missing or damaged, please note on this sheet and contact the place of purchase to arrange for replacement parts.

PARTS LIST

Company Name: _____ Co. Account #: _____
to be filled out by retailer

Canopy



1ea 130*H22mm

Hex nut




1ea 1/2**H3mm

Wire connectors



2ea A3 Orange

Mounting Strap
w/ ground screw




1ea 100*22*H4mm
/1ea 8/32**H10mm

Nipple



1ea 1/2**H55mm

Chain connector



2ea 5*H58.5mm

Chain




1ea 3.8mm*L72"

Mounting screws




2ea 8/32**H1"

Canopy Loop and
Canopy loop
collar




1ea 1/2**H46mm

12" Rod



3ea 12.7*H305mm

Crystal draping
A1 x 3pcs



Crystal draping
A2 x 3pcs



Crystal drops
B2 x 3pcs



Crystal drops
C1 x 1pcs



Crystal drops are included in parts bag. (see crystal assembly instruction)

Part Needed _____

Quantity _____

Part Needed _____

Quantity _____

Reason why _____

(missing, scratched, broken glass, bent, bad finish)

Comments _____

FIXTURE ASSEMBLY INSTRUCTIONS


Read and review installation instruction sheet, but do not install before assembling the fixture.

1. By measuring determine correct number of rods and chain needed for proper hanging height. There are two optional 12" rods included.
2. To shorten the fixture trim the wires to the desired length plus at least 8~10 inches. You must use at least one Rod.
3. To lengthen the fixture add additional rods (ROD-8981 CH) or additional chain (CHAIN-8981), available separately.

NOTE: THE SHADE ASSEMBLY CAN BE DAMAGED BY ROUGH HANDLING. USE CARE WHEN ASSEMBLING.

8981-M1L BRI / GRM

Fig 1

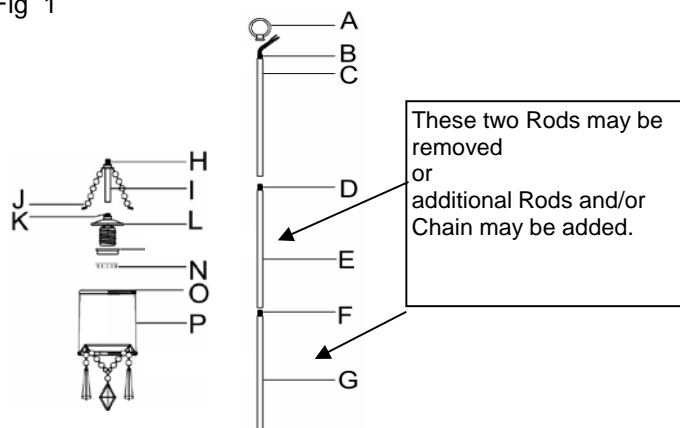

For Customer Service, contact the place of purchase to arrange for replacement parts.



PARTS & ASSEMBLY SHEET

Fixture Name: Echelon 8981-M1L BRI / GRM

4. Pull the fixture's wire through the Rods.
5. Thread Rod (F) into Frame at (H) until tight.
6. Thread Rod (D) into Rod (F) until tight. repeat for any additional rods.
7. Feed the fixture wires through the Top loop (A) and pull the wires until taut.
8. Thread Top loop (A) into Rod (C) until tight.
9. By measuring determine correct number of links needed for proper hanging height. Use a pair of pliers to open one link of the Chain then remove the excess Chain and discard it.
10. Use one chain connector (A12) to attach one end of the chain to the Top loop (A) and close the chain connector.
11. Feed the fixture wires through the Chain (every three links) and pull the wires until taut.
12. Slip Canopy loop collar (A11) over the Chain, then do the same with the canopy (A9).
13. When ready to complete the installation Use the other chain connector and attach the other end of the chain to the canopy loop (A10) and close the chain connector.
14. Make sure the weight of the chandelier is supported by the chain-not the electrical wire.
- * You may now install the fixture.**
15. Place the Fabric shade (P) over the threaded socket (L) and secure in place by threading the ring (M) and Socket ring (N) on until tight. Then attach Crystal draping (J) to hook (O) of shade.
16. Install the light bulb in accordance with the fixture's specifications.

(DO NOT EXCEED MAXIMUM WATTAGE RATING!)

Fig 2

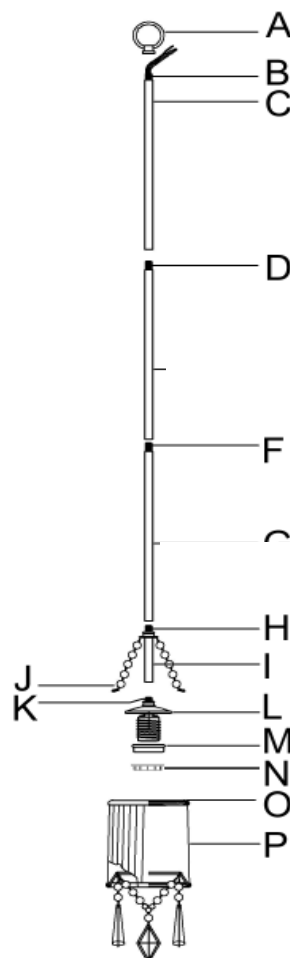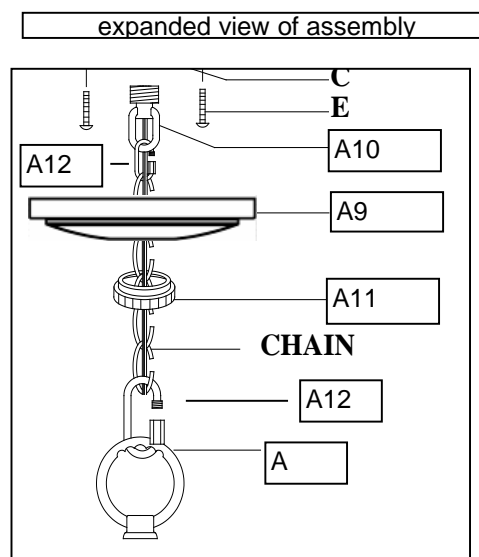


For Customer Service, contact the place of purchase to arrange for replacement parts.

WARNING ! SHUT OFF POWER AT FUSE OR CIRCUIT BREAKER.

HANGING THE FIXTURE (Fig.1)

1. Carefully remove the new fixture from the carton and the yellow bag that holds all parts. Check that all parts are included as shown in the illustration and parts list.
2. Shut off the power at the circuit breaker and remove old fixture from ceiling, including the old mounting strap.
3. Thread Nipple(A-8) into Canopy loop (A-11) until snug. Thread Hex nut (A-6) and Washer (A-5) on next.
4. Thread other end of the Nipple (A-8) with Canopy loop attached into Mounting strap (A-4) about 4 complete turns.
5. Tighten the Washer (A-5) and Hex Nut (A-6) until snug to the Mounting strap(A-4).
6. Take this mounting strap assembly and mount to ceiling junction box with Mounting Screws (A-7). Tighten screws securely with screw driver.
7. Unscrew the Canopy loop collar(A-10) from the Canopy loop. Take the canopy and pass over the Canopy loop. approximately one half of the canopy loop exterior threads should be exposed. Adjust until desired height is reached. *the Canopy loop collar should fit snugly on the Canopy loop after the canopy is installed. Remove Canopy and Canopy loop collar.
8. Assemble the fixture and have an assistant or secure support hold the weight of the fixture while you complete the wiring connections.
9. Thread the fixture wires and ground wire of the assembled fixture through the canopy loop and nipple and into the outlet box.


Fig. 1

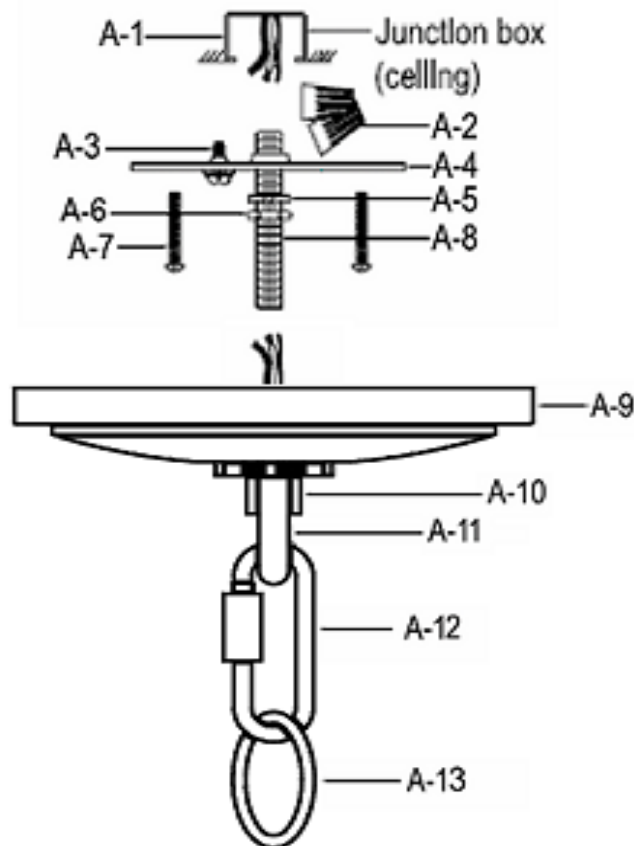

CONNECTING THE WIRES (Fig 2)

10. Attach the power supply wires to the fixture lead wires by connecting BLACK to BLACK (or SMOOTH) and WHITE to WHITE (or RIBBED).
 11. Attach the GROUND wire(GREEN or COPPER) from the Junction Box and the fixture Ground wire to the green Ground Screw on the Mounting Bracket (A-4) or connect both wires together using the correct size of wire connectors.
- NOTE: Twist the wires together in the same direction you twist the wire connector onto the wires.
12. Tuck these wire connections neatly into the Junction Box.

Fig. 2

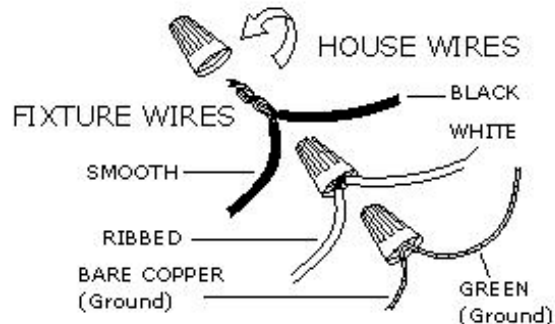


FINISHING THE INSTALLATION


13. Raise Canopy (A9) to the ceiling and secure in place by tightening the Canopy loop collar(A11) onto the Canopy Loop(10).
14. Install the light bulbs and shade as per the fixture assembly sheet.

**YOUR INSTALLATION IS NOW COMPLETE.
RETURN POWER TO THE JUNCTION BOX AND
TEST THE FIXTURE.**


CRYSTAL INSTRUCTION

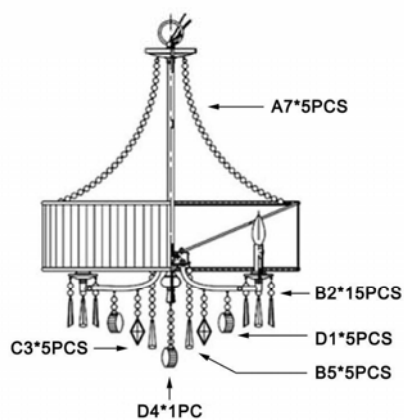


8981/5

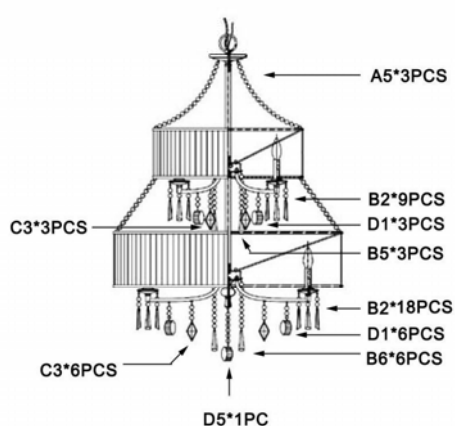


8981/9

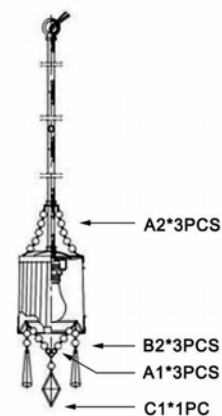


8981/M1L

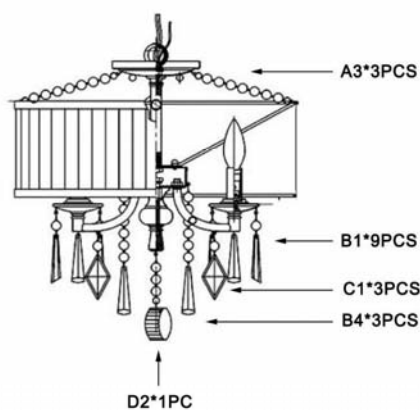


8981/SF

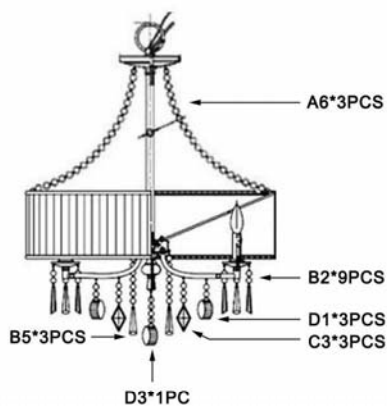


8981/3P

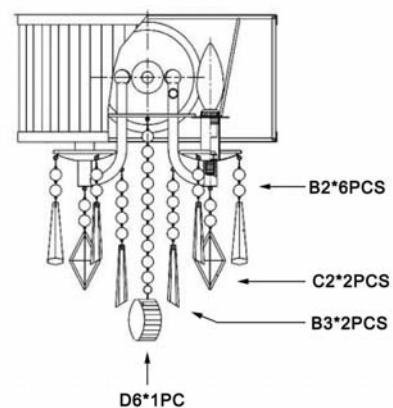


8981/WSC

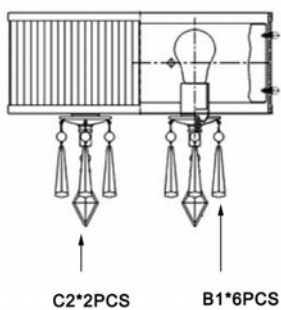



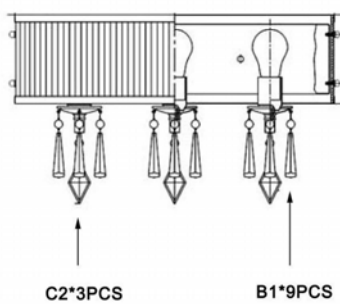



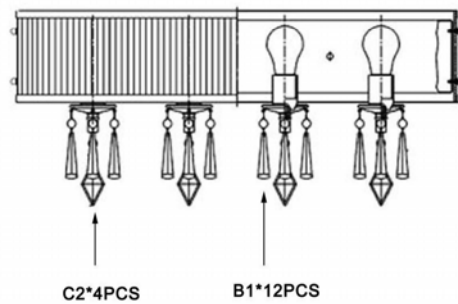




8981/BA2












8981/BA3









8981/BA4

A-Crystal drop							Crystal number and size			
A1  K508*3pcs	A2  K508*5pcs	A3  K508*7pcs	A4  K508*11pcs	A5  K508*17pcs	A6  K508*19pcs	A7  K508*25pcs	 K508	 K521	 K525	 K526

B-Crystal drop					
B1  K508*1pc+K521*1pc	B2  K508*2pcs+K521*1pc	B3  K508*4pcs+K521*1pc	B4  K508*6pcs+K521*1pc	B5  K508*7pcs+K521*1pc	B6  K508*9pcs+K521*1pc

C-Crystal drop		
C1  K508*1pc+K525*1pc	C2  K508*2pcs+K525*1pc	C3  K508*3pcs+K525*1pc

D-Crystal drop					
D1  K508*2pcs+K526*1pc	D2  K508*3pcs+K526*1pc	D3  K508*4pcs+K526*1pc	D4  K508*5pcs+K526*1pc	D5  K508*6pcs+K526*1pc	D6  K508*10pcs+K526*1pc